

UBL Installation Instructions v.6.1

BALL OR BOLT MOUNTED

Tools needed: 2) 9/16" Either sockets or open end wrenches



MAIN COMPONENTS

- A** Receiver Base
- B** Support Upright
- C** Retainer Hook
- D** Under Side Support Washer

FASTENERS

- E** 1) 3/8" x 1" bolt, washer & lock nut (smaller thickness)
- F** 1) 7/16" x 1" bolt, lock washer, washer, and nut
- G** 1) 1/4" x 2 3/8" PTO Spring Clips
- H** 1) 3/8" PTO Spring Clips



Scan for
Installation Video



Base Assembly


Parts: A,B,H,D

Ball Mounted Installation: For Bolt Mounted, skip this step

- Bolt the receiver Base (**A**) to the Lift Bracket (**B-welded end**)
- Using the 7/16" x 1" bolt and 7/16" flat washer (**H**) insert thru the hole at the base of the support upright (**B**)
- Slip the support upright (**B**) with the bolt & washer and place it between the two flanges of the receiver base (**A**). Flanges will be pointed upward.
- From the bottom of the receiver base (**B**) add the support washer (**D**) between the 7/16" lock washer and 7/16" nut (**F**) Tighten tight, keeping support washer aligned with the receiver base



Side View

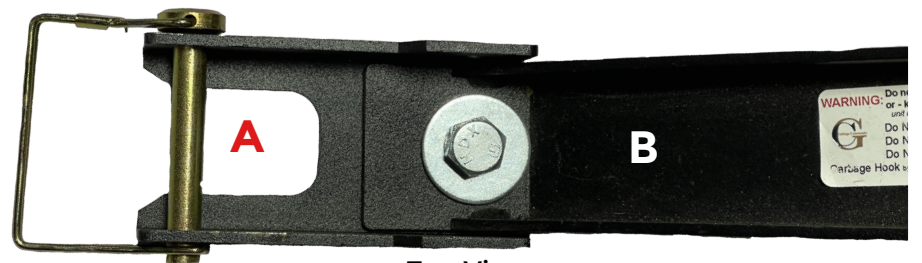

Top View



Arm Assembly

Mount the retainer hook arm to the support arm (**non welded end**)

Ball Mounted:




- If you're installing the ball mounted you can tighten the nut so arm can not turn. You will not need the 3/8" washer (**E**). The ball will be the swivel point

Bolt Mounted:



- Make sure to install the 3/8" washer (**E**) between the support upright (**B**) and support arm (**C**) if you are using this as a bolt-on application

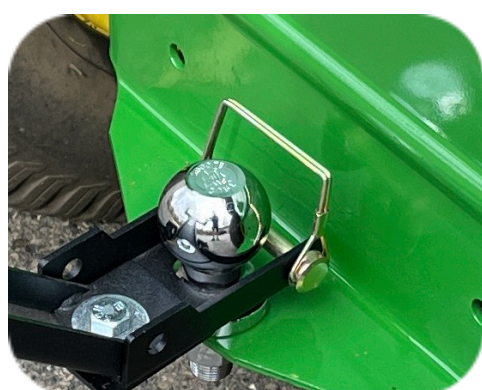

- To mount your Garbage Hook to your receiver hitch simply insert the 3/8" PTO Spring Clips (**H**) thru the ball mounting base (**A**) and under your 1-7/8" or 2" ball.
- NOTE: 2" Ball works best



- Bolt the support arm (**B**) using the 7/16" x 1" bolt (**F**) Bolt on to the flange of your tow vehicle, using the under side support washer (**D**) on the bottom of the vehicles flange. This will help stiffen the mounting flange

NOTE: Do not leave unit attached without cans attached unit could swing into the rear tires causing damage to the unit.

Note: Handel weight maybe reduced due to the thickness of the tow vehicles hitch flange thickness.

We suggest height between 14"- 21" allowing for approximately 30% of the cans weight to be resting on the support

When transporting your wheeled cans on steep or challenging grades, we recommend securing the handle using all clips that comes standard with your order.



Other Information



Fastener Problem?
• We have options

We also offer Ball Hold Down Straps and Quick Release Pins that are easy to apply if the PTOs are hard to use.



Ball Hold Down



Quick Release Pin or Lasso Kit



See our website for more details



Animal Problem?
• Garbage Strap™



Odor Problem?
• Odor Commander™

Warnings:

- Keep all nuts tightened • Do Not exceed 15 MPH, or 75 lbs • Do Not carry passengers • Do Not use on public roads
- Turn off vehicle and put in park before attaching your Garbage Hook.

****Garbage Hooks are designed for towing, DO NOT backup with cans attached. Damage may accrue****

Warranty:

We understand that sometimes products may not meet your expectations which is why we offer a warranty period during which you can return the product for a full credit or replacement. Just fill out the form and we can issue you a return label or refund.

<https://www.garbagecommander.com/warranty>

If you have any questions, concerns or suggestions with your order, call or text us at 608-607-2788
Send an email to info@garabgecommander.com

Before leaving a negative review, contact us, we promise to make things right with you.
Help us grow by spreading the word and taking the time to leave a positive review.

Thank you for your order, as a small company we truly appreciate your business!



Garbage Hooks by:
LaMalco LLC - 2709 N. Burdick Rd. Janesville, WI. 53548
Garbage Hooks are patented and made in the USA.
Patent US 9,566,837 B1

