

Can Coupler

Installation Instructions v.6.1



Scan for
Can Coupler
Video



Comes with 3) 1/4" x
2 3/8" PTO Spring
Clips



Before proceeding please make sure the main can is securely attached to the garbage hook using the PTOs

Step 1

Hook the Can Coupler to the main can's lower lift bar. In most cases Can Coupler's can remain in place on either the lift bar or the second cans handle. Use one PTO to secure cans lift bar to the Can Coupler

Need another PTO? We also offer Ball Hold Down Straps and Quick Release Pins that are easy to apply if the PTOs are hard to use.

[See our website for more details](#)

Step 2

Attach the handle of second can being towed and use one PTO clip to secure the handle to the Coupler. **Note: Heavier can should be the main can, and the lighter one the tow can.**



Warranty:

We understand that sometimes products may not meet your expectations which is why we offer a warranty period during which you can return the product for a full credit or replacement. Just fill out the form and we can issue you a return label or refund.
<https://www.garbagecommander.com/warranty>



Thank you for your order, as a small company we truly appreciate your business!

If you have any questions or concerns with your order, call or text us at 608-607-2788
Send an email to info@garbagecommander.com

Before leaving a negative review, Contact us, we promise to make things right with you.
Help us grow by spreading the word and taking the time to leave a positive review.




Garbage Hooks by:
LaMalco LLC - 2709 N. Burdick Rd. Janesville, WI. 53548
Garbage Hooks are patented and made in the USA.



Can Coupler

Installation Instructions v.5.2

Main can

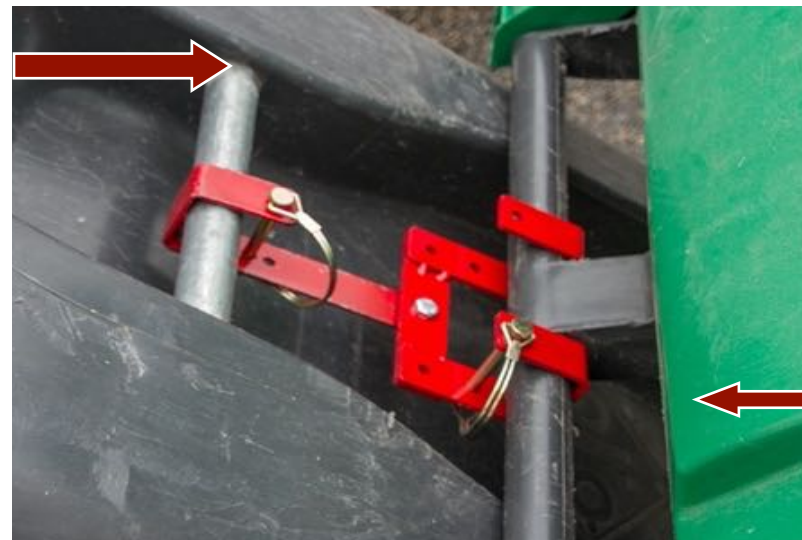

Scan for
Can Coupler
Video



Towed Can

Before proceeding please make sure the main can is securely attached to the garbage hook using the PTO or ball hold down.

Step 1

Hook the Can Coupler to the main can's lower lift bar. In most cases Can Couple's can remain in place on either the lift bar or the second cans handle. Use one PTO to secure cans lift bar to the Can Coupler

Step 2

Attach the handle of second can being towed and use one PTO clip to secure the handle to the Coupler.

Note: Heavier can should be the main can, and the lighter one the tow can.

Thank you for your order, as a small company we truly appreciate your business!

If you have any questions or concerns with your order, call or text us at 608-607-2788
Send an email to info@lamalco.com

Before leaving a negative review, Contact us, we promise to make things right with you.
Help us grow by spreading the word and taking the time to leave a positive review.



Garbage Hooks by:
LaMalco LLC - 2709 N. Burdick Rd. Janesville, WI. 53548
Garbage Hooks are patented and made in the USA



Can Coupler

Installation Instructions v.5.2

Main can



Scan for
Can Coupler
Video



Towed Can

Before proceeding please make sure the main can is securely attached to the garbage hook using the PTO or ball hold down.

Step 1

Hook the Can Coupler to the main can's lower lift bar. In most cases Can Couple's can remain in place on either the lift bar or the second cans handle. Use one PTO to secure cans lift bar to the Can Coupler

Step 2

Attach the handle of second can being towed and use one PTO clip to secure the handle to the Coupler.

Note: Heavier can should be the main can, and the lighter one the tow can.

Thank you for your order, as a small company we truly appreciate your business!

If you have any questions or concerns with your order, call or text us at 608-607-2788
Send an email to info@lamalco.com

Before leaving a negative review, Contact us, we promise to make things right with you.
Help us grow by spreading the word and taking the time to leave a positive review.



Garbage Hooks by:
LaMalco LLC - 2709 N. Burdick Rd. Janesville, WI. 53548
Garbage Hooks are patented and made in the USA

